

3200LR12 frequency changeover to OmniSTAR's new service using AgRemote.

The program Agremote can be downloaded from here www.omnistar.com.au/techinfo/switch.html

Please make sure your antenna is in clear view of the sky.

In order to change the frequency on your receiver to OmniSTAR's new service there are 4 steps you will need to follow.

These include:

1. **Change** your frequency to **1535.185**.
2. **Check** the frequency on your receiver is entered in correctly.
3. **Call** OmniSTAR to activate your receiver on the new frequency.
4. **Confirm** your receiver is working on DGPS.


Connect the serial cable to the Port on the receiver not used by your guidance system.

CHANGE YOUR FREQUENCY TO 1535.185

1.



Press the **ESCAPE** button until the "Home" screen appears.

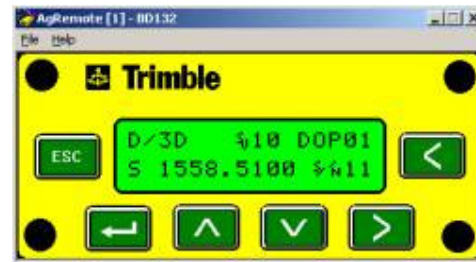


2.



Press the **RIGHT** button until the "Configuration" screen appears.



3.  **DOWN**
 Press the button once, a screen similar to the right appears.



4.  **RIGHT**
 Press the button until the "DGPS Config" screen appears.



5.  **DOWN**
 Press the button until the "EZ Sat: Omni" screen appears.



6.  **RIGHT**
 Press the button for the cursor to flash on the screen.



7.



Press the **DOWN** button to change the service name to "OCSAT". IF "OCSAT" **DOES NOT APPEAR** IN THIS SCREEN (*firmware versions less than 3.0*) THE NEW FREQUENCY WILL NEED TO BE ENTERED IN MANUALLY. If this is the case please move to step 9.



8.



Press the **ENTER** button to set "OCSAT". The cursor will disappear from the screen. Now move to step 14.



10.



Press the **DOWN** button until the "Satellite Freq" appears.



11.



Press the **RIGHT** button for the cursor to flash on the first digit.




12.

Press the **DOWN**  and **UP**




buttons to change the

digits. Press the **RIGHT**  button to move on to the next digit until the frequency is **1535.1850 MHz**.



13.


Press the  **ENTER** button to lock in the new frequency. The cursor will disappear from the screen.



CHECK THE FREQUENCY ON YOUR RECIEVER IS ENTERED IN CORRECTLY

14.

Press the  button until the "Home" screen appears.

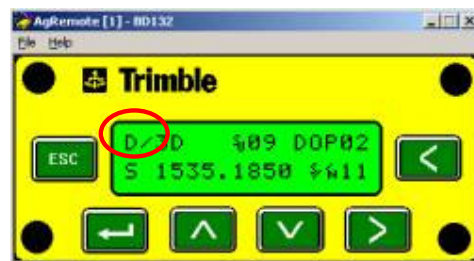

CALL OMNISTAR TO ACTIVATE YOUR RECIEVER ON THE NEW FREQUENCY

15. Please call OmniSTAR on 1300 794 498 while your receiver is switched on and in clear view of the sky to activate to OmniSTAR's new service.

CONFIRM YOUR RECEIVER IS WORKING ON DGPS

16. The D on the top line will indicate the unit is in differential. The frequency on the bottom line will read OmniSTAR's new frequency. The D may take 5 to 10 minutes to appear after the unit has been re-subscribed. Once the D is present in the top left hand corner of the screen the receiver is now using corrections from OmniSTAR's new service.

Please contact OmniSTAR on 1300 794 498 between business hours.